

Instruction Manual



yes

4.0

Ana-digit 24 hour Solunar Movement

zulu - inca - kundalini - cozmo


Welcome to the Ownership of a YES Watch.

YES is a complex time machine
and offers layers of time not usually found in a wristwatch.
Solar time, lunar time, digital time and military time,
along with many other features,
are all packed into one time piece.
In order to get the most out of your watch,
we strongly recommend reading this manual.


www.yeswatch.com

Copyright Wild Seed Inc. 2006

24 HOUR BEZEL

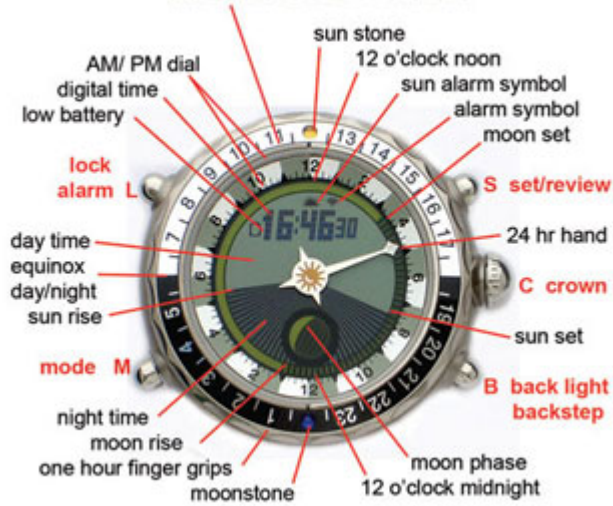

SOLUNAR BEZEL

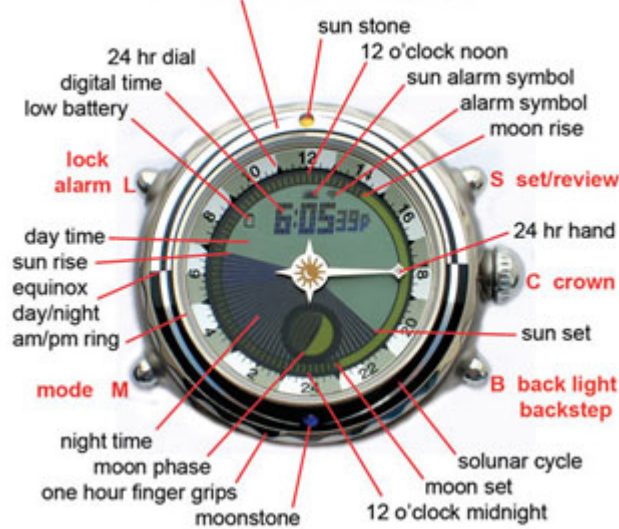

SYMBOL BEZEL



Basic Button Functions

M - The **M**ode button is used to cycle through these modes:
SHOWING TIME (for HOME / AWAY locations)
SET HOME > SET AWAY > SET TIME
SETLCD RING > STOPWATCH > TIMER
S/M CALC > PET COUNTDOWN

S - The **S**et & Data review button is used to enter selected mode and to set data. In normal running mode it is used to review time data and toggle between HOME / AWAY locations.

L - The **L**ock & Alarm button is used to lock settings, enter and activate the alarm, override DST settings manually and other time data review functions.

B - The **B**acklight button is used to turn the light on, turn the Digital time off and step backwards during setting sequence.

C - The **C**rown is used to set the 24-hour solunar hand.

**Please note that for the watch to operate correctly
location and time must be set.**

How to set HOME and AWAY locations

The watch is pre-programmed for 583 locations worldwide through the years 2000 - 2099.
The city listing is in alphabetical order.

- Push **M** once until display reads **SET HOME**, then push **S** to enter the alphabetical setting sequence. The letter **A** will flash.
- Push **S** until you reach the first letter of your city, then push **L** to enter the city listing. Continue pushing **S** until your city appears. (If you pass your selection, push **B** to go backwards.) Then push **L** to lock the selection. The display will read **WAIT** and then it will display location and time.
- To set your AWAY location push **M** twice until display reads **SET AWAY** and then follow the same procedure as above.
- To toggle back and forth between time for HOME and AWAY locations, push **S** twice, quickly.

Pushing **M** anytime during setting procedures, or pushing no button at all for 2 minutes, will revert the watch to previous setting.

How to Set location by latitude and longitude

To do this you need to know latitude, longitude, time zone and DST system for your location. Go to **LAT/LON** under **L** in city listing for either **SET HOME** or **SET AWAY** mode, then push **S** to enter the setting sequence guided by a flashing letter or number. Push **S** to set (**B** to go back) and **L** to lock each flashing digital readout.

The sequence is as follows:

1. Latitude: **S**=south ~ **N**=north / **0~90** degrees
2. Longitude: **E**=east ~ **W**=west / **0~180** degrees
3. Time Zone: Plus/minus **12** hours in **30** min increments
4. DST: **USA** / **EUROpe** / **AUSTralia** / **LATiN** America
or **NO DST**

Once completed the display will read **WAIT** and show time.

- To determine your LAT/LON see an atlas or the internet.
- To determine your time zone see map on inside back panel.
- To determine DST see page 25 or contact a local source.

Please note that the calculations for setting locations and time may take up to 45 seconds.

How to set Digital time and 24-hour Solunar hand

Push **M** three times until **SET TIME** is displayed and then push **S** to enter the setting sequence guided by a flashing letter or number. Push **S** to set (**B** to go backwards) and then push **L** to lock each flashing readout in the following sequence:

1. Choose display mode: **AM/PM** or **24 Hours**.
2. Then set the last 2 digits of **Year, Month** and **Date**. Please note that the setting of year begins with the 2 digits on the right. For example, in 2013 use 13.
3. Then finally set **Hours** and **Minutes**.

Once you lock the minutes the display will read **WAIT** and the seconds will start counting.

Now that you have set digital time for HOME, your watch will automatically adjust for AWAY time, all other time data, and any future changes in HOME location.

Pull the crown **C** out and turn until the solunar hand points to time on the 24-hour dial. 12 o'clock noon is on top, 24 hour midnight on bottom. Push crown back in to engage hand.

How To Tell Time

YES offers an extensive universe of time data.
The following are descriptions of the various aspects
and how to use them to your full advantage.

24-HOUR TIME

The 24-hour solunar hand, which tracks the sun's and moon's path across the sky, points to time on the inner 24-hour dial. Noon on top, midnight on bottom. Every other hour is shaded and (15), 30 and (45) minute intervals are indicated.

SOLAR TIME

The main center segments shows the ratio of day and night, times for sunrise and sunset, and they relate to the 24-hour dial. Each solar segment represents 15 minutes.

LUNAR TIME

The smaller circle in the bottom half of the LCD indicates the lunar phase. Each moon phase segment represents about 44 hours.

The outer LCD ring shows the ratio for moon up and moon down, times for moonrise and moonset, and they relate to the 24-hour dial. Each lunar segment represents 15 minutes.

All rotating bezels represent a 24-hour dial with an equinox day and night display. The duo finish on the thin ring inside the bezel divide the AM/PM hours.

When setting the sunstone halfway between sunrise and sunset, it indicates time for solar high noon.

Depending on which watch model you have, one of the following three bezel descriptions applies.

24 HOUR BEZEL

The 24-hour bezel is best used to keep time for a second time zone or location at a glance. Rotate the bezel until hand points to time for the desired time zone. This bezel is accompanied with an AM/PM inner dial.

SYMBOL BEZEL

The symbols coordinate to a 24-hour dial and can be used to keep time for a second time zone or location at a glance. The symbols can also be used as a code for daily personal events. You choose the meaning. This bezel is accompanied with a 24-hour inner dial.

SOLUNAR BEZEL

The solunar bezel can be used to track the daily rise and set of the sun or the moon. This bezel is accompanied with a 24-hour inner dial.



SOLSTICE & EQUINOX DATES

On solstice and equinox dates the center LCD center segments will turn into a sun display. Every 30 minutes the event name will display for 30 seconds and flash a thin ray sun display. To show regular time display push and hold S for 2 seconds.

CROSS QUARTERS

On cross quarter dates, the days halfway in between equinoxes and solstices, the LCD center segments will turn into a sun display. Every 30 minutes the event name will display for 30 seconds and flash a thick ray sun display. To show regular time display push and hold **S** for 2 seconds.

Following is the sequence of the above mentioned dates:
WINTER SOLSTICE >> IMBOLC >> SPRING EQUINOX >> BELTAINE
SUMMER SOLSTICE >> LAMMAS >> FALL EQUINOX >> SAMHAIN

DIGITAL TIME DATA REVIEW

When **SHOWING TIME** the digits show **hrs : min : sec** for either HOME or AWAY location, depending on your choice.

All daily time data is displayed by pushing the **S** button:

- Push **S** once and **Month, Date** and **Day** appears for 3 seconds.
- Pushing **S** twice will take you to the other location. Pushing **S** twice again will take you back.
- Push and hold **S** for 2 seconds and the following sequence of time data will display:

Location > Year > DOY (Day Of Year)
Week # > Latitude / Longitude
SR (Sun Rise) > SN (Solar Noon) > SS (Sun Set)
Moon % Illumination - MR (Moon Rise) > MS (Moon Set)
NM (month : date and hrs : min of next New Moon)
FM (month : date and hrs : min of next Full Moon).


Each will display for 5 seconds unless you push **S** to manually cycle through the sequence quicker. Push **L**, or push and hold **S**, to change to next group of data in the sequence of:

CITY & TIME data > SUN data > MOON data

Push **M** anytime during the sequence to revert to time.

If accessing time data at night push the **B** button repeatedly to keep the light on.

Some of the digital display read-outs.

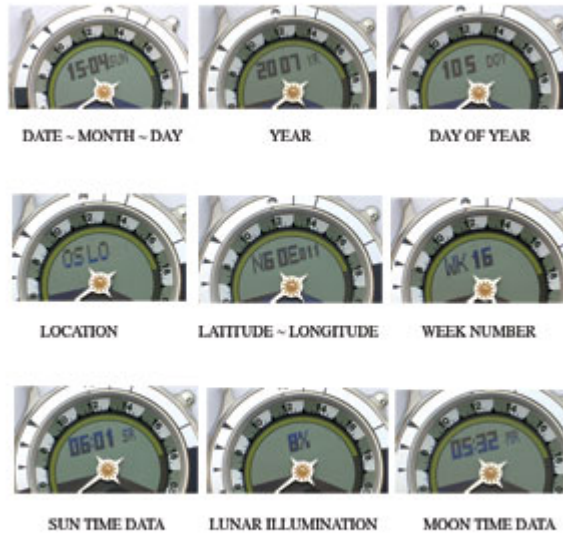

BACK LIGHT

Push **B** once to turn back light on for 3 seconds. When setting the watch at night, push **B** frequently to keep the backlight on. To use backlight during time data review, push **B**.

TURNING DIGITAL TIME OFF

Push **B** twice to turn digital time display off. This will render a display that relates the 24 hour solunar hand and the 24 hour inner dial, to the daily rhythms of the sun and the moon. Pushing any button will restore the digital time display.

FINDING SOUTH

On a sunny day the watch can be used as a makeshift compass. Rotate the bezel until the sunstone falls at solar high noon, halfway between sunrise and sunset. Then point the hand towards the sun and the sunstone will point to the South. At high latitudes this feature becomes less accurate.

RESTARTING THE WATCH

The watch can be restarted by pushing all 4 buttons at once, which will cancel all previous settings, sound alarm, flash display, turn back light on and then start running time from 01-01-2006 with Los Angeles as HOME and Paris as AWAY. Location and time must be reset.

How to set the outer LCD ring

Push **M** 4 times until **SET RING** displays, then push **S** to review choices and **L** to lock selection. The choices are:

MR/MS = LCD ring will show times for moon up/down and moon rise/set for location displayed.

SR/SS ALT = LCD ring will show day/night ratio and sun set/rise for alternate location.

The watch will show **MR/MS** if the watch is restarted, battery exchanged, or if no choice has been made.

How to use the Stopwatch

Push **M** 5 times until display reads **00:00:00 c**. Push **L** to start stopwatch and **S** to stop it. Time elapsed will display. Pushing **S** again will reset to **00:00:00 c**. To start again push **L**.

- If you want to take lap time push **L** to start stopwatch and then push **L** again to display lap time for 5 seconds, before new lap time is automatically counted. Repeat lap taking as necessary. Pushing **S** will show elapsed time of all laps. Push **S** again to reset to zero.
- Stopwatch will run up to **23hr : 59min : 59sec**.
- Push **M** to exit and revert to time display.

Push **M** 5 times to re-enter stopwatch mode and last setting.

How to use the Timer

- Push **M** 6 times until display reads **00:00 TR**
- Push **S** to set (**B** to go back) and **L** to lock the timer data, up to 99 min 59 sec. First set the minutes, then seconds.
- Push **L** to start and stop the timer countdown. At zero a 15 second alarm will chime. When re-entering timer mode, or pressing **S** after the timer has stopped the display will show last setting.

How to set and use the alarms

In normal running mode push **L** to enter the alarm setting and activation mode. Initially **00:00** will display; once set the actual alarm time will show.

- Push **S** to set (**B** to go back) and **L** to lock alarm time, first **Hours**, then **Minutes**. When the sound symbol above the digital time appears the alarm with a 10-minute snooze will sound.
 - To activate the automatic sun rise and sunset alarm, which chimes half hour before and at sunrise and sunset, push **L** until the rising sun symbol appears above the digital time.
 - By repeatedly pushing **L**, both, either or no alarm can be activated, as indicated by the alarm icons shown.
-

How to use the Past & Future time data calculator

This function will give you the sun and moon data as outlined above for any location from year 2000 to 2099.

- Push **M** 7 times until display reads **SM-CALC** and then push **S** to enter the setting sequence guided by a flashing letter or number. Push **S** to set (**B** to go backwards) and **L** to lock each flashing digital readout. The sequence is as follows:

LOCATION > YEAR > MONTH > DATE

The display will read **WAIT**, and then show location, followed by the time data. Setting will remain in memory and can be reviewed in **SM-CALC** mode. Initially **HOME** location is displayed, or if previously set, the last selected city will be shown when entering this mode. Push **L** to review data for this setting.

- Pushing **L** during data review sequence will speed it up. Push and hold **L** for 2 seconds to change to next group of data during the **CITY & TIME** data > **SUN** data > **MOON** data review sequence.
 - Push **M** anytime to revert to regular time display.
-

How to use PET countdown

The Phase Elapsed Time function is used to count down the days,, hours, minutes and seconds to a specific event. It can also be used to count up after the event. Up to 9999 days either way.

- Push **M** 8 times until **PET** is displayed and then push **S** to enter setting sequence. Push **S** to set (**B** to go back) and **L** to lock each segment in the flashing sequence of:

YEAR > MONTH > DATE > HOUR > MINUTE

- Once set, the display will show the time of event and then how many days are left, before it reverts to showing continuous countdown by hours, minutes and seconds.
 - To exit **PET** push **M** once to show regular time. Push **M** 7 times to re-enter **PET**. When re-entering the mode pushing **L** will show **PET** data, while pushing **S** will enter the setting sequence.
 - There is a 30 beep countdown alarm prior to take-off before the digital time starts counting up.
 - The countdown event refers to time for HOME location only.
 - The arrow displayed after the digits indicate if PET is counting UP or DOWN.
-

Auto return

If you enter any mode except for **Stopwatch**, **Timer** and **PET**, the watch will automatically return to **SHOWING TIME**, after about 2 minutes of no operation. Pushing **M** while in **Stopwatch**, **Timer** or **PET** mode will return the display to **SHOWING TIME**.

Battery Care

When the LCD battery goes low, the display will show a low battery icon on the left side of the digits. A frozen, partial or weak display is also a sign of a low battery. When the analog hand battery goes low, the solunar hand will simply stop.

There are 2 batteries in the watch:

1. LCD battery lithium CR2032, expected lifetime 12- 24 months.
2. Analog hand battery lithium V364, expected lifetime 4-5 years.


To exchange the batteries, send your watch to us or take it to your trusted jeweler. Ask him to be careful and to ensure proper seating of the O-ring before screwing the back down. If exchanging the small analog battery, slide the metal "tongue" clockwise to the side to remove it. Do not apply too much pressure inside the module.

Do not unscrew any screws during battery exchange procedure.



How to Adjust the Bracelet

Place the bracelet in the link adjustment tool as shown. Make sure the screw-pin points in the same direction as the arrow on the back of the link. Carefully align screw pin with link pin, guide the bracelet into place and then slowly start turning the wheel inwards. The link pin will glide out. Remove as many links as desired to fit your wrist. Re-attach the links by reversing the process. Spare screw-pins are in the back of tool.

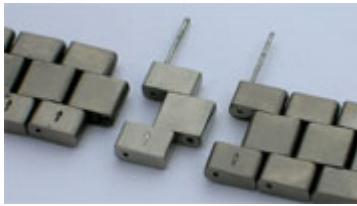

How to exchange the bracelet.

Release the bracelet by inserting the fork-end of the dual pick into the slot on the back of the bracelet attachment link, leveraging it carefully, but firmly, outwards to release the spring loaded pin. You may want to split the bracelet at the clasp before you get started.

Once the bracelet is removed, reinsert the spring pins into the alternate bracelet and attach it to the case in the appropriate holes inside the horns.

Please note that adjusting and exchanging the bracelet is, in essence, the work of a jeweler.

If in doubt, take it to a professional.

We have included the basic tools for you to do it yourself.

Work from the back on a soft surface and be careful.

DST considerations.

Across the world there are upwards of a dozen different "Daylight Saving Time" systems of which some are determined on an annual basis by local governments.

When setting location by any of the 583 city listings DST has already been programmed.

In the event you need to override DST go to **SET HOME** or **SET AWAY**, then push **L** and **DST AUTO** will appear.

- Push **S** to cycle through **DST AUTO > DST ON > DST OFF** choices and push **L** to lock your selection.
 - This feature applies to locations set by **LAT/LON** as well.
-

Following are DST definitions used in programming:

USA DST = SA = Standard American DST. Starting Spring 2007 DST begins on the second Sunday of March and ends on the first Sunday in November. On the second Sunday of March clocks are set ahead one hour at 2:00 am local standard time which becomes 3:00 am local daylight time. On the first Sunday in November clocks are set back one hour at 2:00am local daylight time, which becomes 1:00 am local standard time.

EURO DST = se = Standard European DST. DST begins at 1 am GMT on the last Sunday of March and ends at 1 am GMT on the last Sunday of October.

AUST DST = sd = Australian DST. At 2 am South Australian standard time on the last Sunday of October time is set 1 hour forward, and at 3 am South Australian summer time on the last Sunday of March time is set 1 hour back.

LATN DST = sb = South Brazilian DST. Changes annually. We used the following standard. At 2 am Southern Brazil standard time on the last Sunday of October time is set 1 hour forward and at 3 am South Brazil summer time on the last Sunday of March time is set 1 hour back.

NO DST = no = Places that do not observe DST: Hawaii, Arizona, Asia, most of Africa, parts of South America and some other.

For the following areas we used these DST standards:

sc = Chile DST begins on second Sunday of October and ends on second Sunday of March. Applies to 5 city listings.

sp = Paraguay DST starts first Sunday in September and ends first Sunday in April. Applies to 1 city listing.

sg = Egypt DST begins last Friday in April, ends last Thursday in September. Applies to 2 city listings.

sn = Namibia DST begins first Sunday in September, ends first Sunday in April. Applies to 1 city listing.

sz = New Zealand DST begins first Sunday of October and ends third Sunday in March. Applies to 4 city listings.

st = Tasmania DST begins first Sunday in October and ends last Sunday in March. Applies to 1 listing.

so = Tonga DST starts first Sunday in November, ends last Sunday in January.

si = Iraq and Syria DST starts April 1 and ends October 1.

ss = Israel starts DST first Friday in April, ends first Friday. Decided annually.

sq = Iran DST starts first day of Farvardin, ends last day of Mehr, March 20- Sept 22 this year. Applies to 5 city listings.

Alphabetical City Listing.

Please note that .3 decimal indicates 30 minutes.

City Listing	LCD display	LAT / LON	DST	Zone
Aberdeen	ABERDEN	57n / 2w	se	0
Abha	ABHA	18n / 43e	no	3
Abidjan	ABIDJAN	6n / 4w	no	0
Abilene	ABILENE	32n / 100w	sa	-6
Abu Dhabi	ABUDABI	24n / 55e	no	4
Abuja	ABUJA	9n / 7e	no	1
Acapulco	ACAPULC	17n / 100w	sa	-6
Accra	ACCRA	6n / 0	no	0
Adelaide	ADELAID	35s / 139e	sd	9.3
Aden	ADEN	13n / 45e	no	3
Adis Abeba	ADISABE	9n / 38e	no	3
Ahmadabad	AHMABAD	23n / 73e	no	5.3
Albany, NY	ALBANY	43n / 74w	sa	-5
Albuquerque	ALBUQRQ	35n / 107w	sa	-7
Alegre	ALEGRE	30s / 51w	sb	-3
Aleppo	ALEPPO	36n / 37e	si	2
Alesund	ALESUND	62n / 6e	se	1
Al-Fashir	ALFASHI	13n / 25e	no	2
Algiers	ALGIERS	37n / 3e	no	1
Alicant	ALICANT	38n / 1e	se	1
Alice Springs	ALICSPG	23s / 134e	no	9.3
Amarillo	AMARILO	35n / 102w	sa	-6
Amman	AMMAN	32n / 36e	se	2
Amsterdam	AMSTRDA	52n / 5e	se	1
Anchorage, AL	ANCHRGE	61n / 150w	sa	-9
Ankara	ANKARA	40n / 33e	se	2
Antafogasta	ANTFGSA	24s / 70w	sc	-4
Antigua	ANTIGUA	17n / 62w	no	-4
Aracaju	ARACAJU	11s / 37w	no	-3
Archangelsk	ARCNGSK	64n / 41e	se	3
Arhus	ARHUS	56n / 10e	se	1
Asheville	ASHEVIL	36n / 83w	sa	-5
Asmera	ASMERA	15n / 38e	no	3
Asuncion	ASUNCIO	25s / 58w	sp	-4
Aswan	ASWAN	24n / 33e	sg	2
Athens	ATHENS	38n / 24e	se	2
Atlanta	ATLANTA	34n / 84w	sa	-5
Atlantic City	ATLNTCT	39n / 75w	sa	-5
Auckland	AUCKLND	37s / 175e	sz	12
Augusta,GA	AUGUSTA	33n / 82w	sa	-5
Austin, TX	AUSTIN	30n / 98w	sa	-6

Azores	AZORES	38n / 26w	no	-1
Baghdad	BAGHDAD	33n / 44e	si	3
Bahia Blanca	BAHBLNC	38s / 63w	no	-3
Bahrain	BAHRAIN	26n / 50e	no	3
Bakersfield, CA	BAKRSFL	35n / 119w	sa	-8
Baku	BAKU	41n / 49e	se	4
Bakwanga	BAKWANG	6s / 23e	no	2
Bali	BALI	8s / 115e	no	8
Baltimore, MD	BALTIMR	39n / 77w	sa	-5
Bamako	BAMAKO	13n / 8w	no	0
Banghazi	BANGHAZ	32n / 21e	no	1
Bangkok	BANGKOK	14n / 101e	no	7
Bangalore	BANGLOR	13n / 77e	no	5.3
Bangor,ME	BANGOR	45n / 69w	sa	-5
Bangui	BANGUI	4n / 18e	no	1
Banjarmasin	BANJRMS	3s / 115e	no	8
Barbados	BARBADO	13n / 60w	no	-4
Barcelona	BARCLNA	42n / 2e	se	1
Bari	BARI	41n / 17e	se	1
Basel	BASEL	47n / 7e	se	1
Baton Rouge	BATNROU	31n / 91w	sa	-6
Bayamo	BAYAMO	21n / 77w	sa	-5
Beaumont, TX	BEAMONT	30n / 94w	sa	-6
Beijing	BEIJING	40n / 116e	no	8
Beira	BEIRA	19s / 35e	no	2
Beirut	BEIRUT	34n / 36e	se	2
Belem	BELEM	2s / 48w	no	-3
Belfast	BELFAST	54n / 6w	se	0
Belgaum	BELGAUM	16n / 74e	no	5.3
Belgrade	BELGRAD	45n / 20e	se	1
Belize City	BELIZE	17n / 88w	no	-6
Benares	BENARES	25n / 83e	no	5.3
Bergen	BERGEN	61n / 6e	se	1
Berlin	BERLIN	52n / 13e	se	1
Bermuda	BERMUDA	65w / 32n	sa	-4
Big Sur	BIG SUR	36n / 121w	sa	-8
Bilbao	BILBAO	43n / 3w	se	1
Billings	BILLING	46n / 109w	sa	-7
Bismarck	BISMARC	47n / 101w	sa	-6
Bissau	BISSAU	12n / 15w	no	0
Blantyre	BLANTYR	16s / 35e	no	2
Bloemfontein	BLOMFNT	29s / 26e	no	2
Bodo	BODO	67n / 15e	se	1
Bogota	BOGOTA	4n / 74w	no	-5
Boise, ID	BOISE	44n / 116w	sa	-7
Bologna	BOLOGNA	44n / 11e	se	1

Bombay	BOMBAY	19n / 73e	no	5.3
Bordaux	BORDAUX	45n / 1w	se	1
Boston	BOSTON	42n / 71w	sa	-5
Bouake	BOUAKE	8n / 5w	no	0
Brasilia	BRASILA	16s / 48w	sb	-3
Brisbane	BRISBNE	27s / 153e	no	10
Birmingham,GB	BRMGHGB	52n / 2w	se	0
Birmingham,US	BRMGHUS	33n / 87w	sa	-6
Brownsville	BRONSVL	26n / 98w	sa	-6
Brunei	BRUNEI	5n / 115e	no	8
Bruxelles	BRUXELL	51n / 4e	se	1
Bucharest	BUCARST	44n / 26e	se	2
Budapest	BUDAPST	47n / 19e	se	1
Buenos Aires	BUENAIR	35s / 58w	no	-3
Buffalo	BUFFALO	43n / 79w	sa	-5
Bujumbura	BUJUMBR	3s / 30e	no	2
Burlington	BURLGTN	44n / 73w	sa	-5
Bur Sudan	BURSUDA	19n / 37e	no	2
Butte	BUTTE	46n / 113w	sa	-7
Cabo San Lucas	CABO	23n / 110w	sa	-7
Cagliari	CAGLIAR	39n / 9e	se	1
Cairns	CAIRNS	17s / 145e	no	10
Cairo	CAIRO	30n / 31e	sg	2
Calcutta	CALCUTA	23n / 88e	no	5.3
Calgary	CALGARY	51n / 114w	sa	-7
Cali	CALI	3n / 77w	no	-5
Canberra	CANBERA	35s / 149e	sd	10
Cancun	CANCUN	21n / 87w	sa	-6
Cape Town	CAPTOWN	33s / 19e	no	2
Caracas	CARACAS	10n / 67w	no	-4
Cardiff	CARDIFF	52n / 3w	se	0
Cartagena	CARTAGN	10n / 75w	no	-5
Casablanca	CASABLN	33n / 7w	no	0
Casper	CASPER	43n / 106w	sa	-7
Cayenne	CAYENNE	5n / 53w	no	-3
Cebu	CEBU	10n / 124e	no	8
Chaco Canyon	CHACO	37n / 108w	sa	-7
Changsha	CHANGSH	28n / 113e	no	8
Charlotte	CHARLOT	35n / 81w	sa	-5
Charleston	CHARLST	33n / 80w	sa	-5
Chengdu	CHENGDU	31n / 104e	no	8
Chiang Mai	CHIANGM	19n / 99e	no	7
Chicago	CHICAGO	42n / 88w	sa	-6
Chihuahua	CHIHUAH	29n / 106w	sa	-6
Chongquin	CHONQIN	29n / 107e	no	8
Christchurch	CHRSTCH	43s / 172e	sz	12

Cincinnati	CINCNAT	39n / 84w	sa	-5
Cleveland	CLEVLND	41n / 82w	sa	-5
Campo Grande	CMPGRND	21s / 55w	sb	-4
Columbia,SC	COLMBIA	34n / 81w	sa	-5
Colorado Springs	COLOSPN	39n / 105w	sa	-7
Columbus, GA	COLUMBG	32n / 85w	sa	-5
Columbus, OH	COLUMBO	40n 83w	sa	-5
Comodore Rivadavia	COMRIVA	46s / 68w	no	-3
Conakry	CONAKRY	10n / 13w	no	0
Concepcion	CONCPCN	37s / 73w	sc	-4
Copenhagen	COPNHGN	56n / 12e	se	1
Cordoba	CORDOBA	32s / 64w	no	-3
Cork	CORK	52n / 9w	se	0
Corpus Christi	CORPSCH	28n / 98w	sa	-6
Coruna	CORUNA	43n / 8w	se	1
Cuiaba	CUIABA	16s / 56w	sb	-4
Curitiba	CURITIB	26s / 49w	sb	-3
Cusco	CUSCO	13s / 72w	no	-5
Cuttack	CUTTACK	21n / 86e	no	5.3
Da Nang	DA NANG	16n / 108e	no	7
Dakar	DAKAR	15n / 17w	no	0
Dallas / Fort Worth	DALLAS	33n / 97w	sa	-6
Damascus	DAMASCS	33n / 36e	si	2
Darwin	DARWIN	13s / 131e	no	9.3
Davao	DAVAO	7n / 126e	no	8
Davenport	DAVNPRT	41n / 90w	sa	-6
Daytona Beach	DAYTONA	29n / 81w	sa	-5
Decatur	DECATUR	40n / 89w	sa	-6
Denver	DENVER	40n / 105w	sa	-7
Des Moines	DESMOIN	42n / 94w	sa	-6
Detroit	DETROIT	42n / 83w	sa	-5
Dhaka	DHAKA	24n / 91e	no	6
Djibouti	DJIBOUT	12n / 43e	no	3
Dar Es Salaam	DRSALAM	7s / 39e	no	3
Dublin	DUBLIN	53n / 7w	se	0
Duluth	DULUTH	47n / 92w	sa	-6
Dunedin	DUNEDIN	46s / 170e	sz	12
Durban	DURBAN	30s / 31e	no	2
Edinburg	EDINBRG	56n / 3w	se	0
Edmonton	EDMONTN	54n / 113w	sa	-7
El Paso	EL PASO	32n / 107w	sa	-7
Elko	ELKO	41n / 116w	sa	-8
Elverum	ELVERUM	61n / 11e	se	1
Enugu	ENUGU	6n / 7e	no	1
Esfahan	ESFAHAN	33n / 52e	sq	3.3
Eugene	EUGENE	44n / 123w	sa	-8

Fargo	FARGO	47n / 97w	sa	-6
Fayetteville	FAYETVL	35n / 79w	sa	-5
Fiji	FIJI	18s / 178e	no	12
Firenze	FIRENZE	44n / 11e	se	1
Flagstaff	FLAGSTF	35n / 112w	no	-7
Fortaleza	FORTALZ	4s / 39w	no	-3
Freetown	FREETWN	8n / 13w	no	0
Fresno	FRESNO	37n / 120w	sa	-8
Frankfurt	FRNKFRT	50n / 9e	se	1
Fort Bragg,CA	FRTBRGC	39n / 123w	sa	-8
Fort Bragg, NC	FRTBRGN	35n / 79w	sa	-5
Fukuoka	FUKUOKA	33n / 131e	no	9
Fuzhou	FUZHOU	26n / 119e	no	8
Gaborona	GABORNA	24s / 26e	no	2
Galapagos	GALAPGS	0 / 90w	no	-6
Gdansk	GDANSK	54n / 19e	se	1
Geneva	GENEVA	46n / 6e	se	1
Genova	GENOVA	45n / 9e	se	1
Georgetown	GEORGTN	7n / 58w	no	-4
Gibraltar	GIBRALT	36n / 6w	se	1
Glace Bay	GLACBAY	46n / 60w	sa	-4
Glasgow	GLASGOW	56n / 4w	se	0
GMT	GMT	0 / 0	no	0
GORKI	GORKI	56n / 44e	se	3
Gothenburg	GOTNBRG	58n / 12e	se	1
Greenville	GREENVL	35n / 82w	sa	-5
Green Bay	GRENBAY	44n / 88w	sa	-6
Grand Canyon	GRNDCYN	36n / 112w	no	-7
Grand Junction	GRNDJUN	39n / 108w	sa	-7
Great Barrier Reef	GRTBARE	20s / 150e	no	10
Great Falls	GRTFALS	47n / 111w	sa	-7
Guadalajara	GUADALA	21n / 103w	sa	-6
Guam	GUAM	13n / 145e	no	10
Guangzhou	GUANGZO	23n / 113e	no	8
Guatemala	GUATMLA	15n / 91w	no	-6
Guayana	GUAYANA	8n / 63w	no	-4
Guayaquil	GUAYAQL	2s / 80w	no	-5
Guiyang	GUIYANG	27n / 107e	no	8
Ha Noi	HA NOI	21n / 106e	no	7
Haikou	HAIKOU	20n / 110e	no	8
Halifax	HALIFAX	45n / 64w	sa	-4
Hamburg	HAMBURG	54n / 10e	se	1
Hana	HANA	21n / 156w	no	-10
Harare	HARARE	18s / 31e	no	2
Harbin	HARBIN	46n / 127e	no	8
Hargeysa	HARGEYS	9n / 44e	no	3

Hartford	HARTFRD	42n / 73w	sa	-5
Havana	HAVANA	23n / 82w	sa	-5
Port Hedland	HEDLAND	21s / 118e	no	8
Helsinki	HELSINK	61n / 25e	se	2
Hermosillo	HERMSIL	29n / 111w	sa	-7
Hilo	HILO	20n / 155w	no	-10
Hobart	HOBART	43s / 147e	st	10
Hong Kong	HONGKON	23n / 114e	no	8
Honolulu	HONOLUL	21n / 158w	no	-10
Horizonte	HORIZNT	20s / 44w	sb	-3
Houston	HOUSTON	30n / 95w	sa	-6
Harrisburg	HRISBRG	40n / 77w	sa	-5
Huambo	HUAMBO	13s / 16e	no	1
Hyderabad	HYDRBAD	17n / 78e	no	5.3
Ibiza	IBIZA	39n / 1e	se	1
Iguacu	IGUACU	26s / 54w	sb	-4
Indianapolis	INDNPLS	40n / 86w	sa	-5
Indore	INDORE	23n / 76e	no	5.3
Innsbruck	INSBRCK	47n / 11e	se	1
Iquitos	IQUITOS	4s / 73w	no	-5
Iraklion	IRAKLON	35n / 25e	se	2
Irkutsk	IRKUTSK	52n / 104e	se	8
Istanbul	ISTNBUL	41n / 29e	se	2
Itabuna	ITABUNA	15s / 39w	no	-3
Izmir	IZMIR	38n / 27e	se	2
Jackson	JACKSON	32n / 90w	sa	-6
Jakarta	JAKARTA	7s / 107e	no	7
Jacksonville	JAKSNVL	30n / 82w	sa	-5
Jerusalem	JERUSLM	32n / 35e	ss	2
Jinan	JINAN	37n / 117e	no	8
Joao Pessoa	JOAPESS	7s / 35w	no	-3
Johannesburg	JOHANBR	26s / 28e	no	2
Juazeiro do Norte	JUAZEIR	7s / 39w	no	-3
Kabul	KABUL	34n / 69e	no	4.3
Kampala	KAMPALA	0 / 32e	no	3
Kano	KANO	12n / 8e	no	1
Kanpur	KANPUR	27n / 80e	no	5.3
Kansas City	KANSASC	39n / 94w	sa	-6
Karachi	KARACHI	25n / 67e	no	5
Kassala	KASSALA	15n / 36e	no	2
Kassel	KASSEL	51n / 9e	se	1
Kathmandu	KATMNDU	28n / 85e	no	5.5
Kazan	KAZAN	56n / 49e	se	3
Key West	KEYWEST	24n / 81w	sa	-5
Khartoum	KHARTUM	16n / 33e	no	2
Kiev	KIEV	51n / 30e	se	2

Kikwit	KIKWIT	5s / 18e	no	1
Kingston	KINGSTN	18n / 77w	no	-5
Kinshasa	KINSHAS	5s / 15e	no	1
Kisangani	KISANGA	1n / 25e	no	2
Knoxville	KNOXVIL	36n / 84w	sa	-5
Koh Samui	KOHSAMU	9n / 100e	no	7
Koln	KOLN	51n / 7e	se	1
Kota	KOTA	25n / 76e	no	5.3
Krakow	KRAKOW	50n / 20e	se	1
Kuala Lumpur	KUALUMP	3n / 102e	no	8
Kumasi	KUMASI	7n / 2w	no	0
Kunming	KUNMING	25n / 103e	no	8
Kupang	KUPANG	10s / 124e	no	8
Kuwait	KUWAIT	29n / 48e	no	3
La Paz	LA PAZ	17s / 68w	no	-4
Lagos	LAGOS	7n / 4e	no	1
Lake Powell	LAKPOWL	37n / 111w	sa	-7
Lake Tahoe	LAKTAHO	39n / 120w	sa	-8
Lanzhou	LANZHOU	36n / 104e	no	8
Laredo	LAREDO	27n / 99w	sa	-6
Las Palmas	LASPALM	28n / 15w	no	0
Las Vegas	LASVEGS	36n / 115w	sa	-8
LAT/LON	LAT/LON			
Leipzig	LEIPZIG	51n / 12e	se	1
Leningrad	LENIGRD	60n / 30e	se	3
Lexington	LEXINGT	38n / 85w	sa	-5
Lhasa	LHASA	30n / 91e	no	8
Libreville	LIBREVL	0 / 10e	no	1
Lillehammer	LILLHAM	61n / 10e	se	1
Lima	LIMA	12s / 77w	no	-5
Limoges	LIMOGS	46n / 1e	se	1
Lincoln	LINCOLN	41n / 97w	sa	-6
Lisbon	LISBON	39n / 9w	se	0
Little Rock	LITLROC	35n / 92w	sa	-6
Liuzhou	LIUZHOU	24n / 109e	no	8
London	LONDON	52n / 0	se	0
Los Angeles	LOSANGL	34n / 118w	sa	-8
Louisville	LOUISVL	38n / 86w	sa	-5
Luanda	LUANDA	9s / 13e	no	1
Lubumbashi	LUBUMBS	12s / 27e	no	2
Lulea	LULEA	66n / 22e	se	1
Loungprabang	LUNGPRB	20n / 102e	no	7
Lusaka	LUSAKA	15s / 28e	no	2
Luxembourg	LUXMBRG	50n / 6e	se	1
Lyon	LYON	46n / 5e	se	1
Maceio	MACEIO	9s / 36w	no	-3

Macchu Picchu	MACHUPI	13s / 73w	no	-5
Madagascar	MADGSCR	19s / 47e	no	3
Madison	MADISON	43n / 89w	sa	-6
Madras	MADRAS	13n / 80e	no	5.3
Madrid	MADRID	40n / 4w	se	1
Madurai	MADURAI	10n / 78e	no	5.3
Malatya	MALATYA	38n / 38e	se	2
Managua	MANAGUA	12n / 86w	no	-6
Manaus	MANAUS	3s / 60w	no	-4
Manchester	MANCHES	53n / 2w	se	0
Mandalay	MANDLAY	22n / 96e	no	6.3
Manila	MANILA	14n / 121e	no	8
Maputo	MAPUTO	26s / 32e	no	2
Maracaibo	MARACAB	11n / 72w	no	-4
Mar del Plata	MARPLAT	38s / 58w	no	-3
Marseilles	MARSEIL	44n / 5e	se	1
Marshall Islands	MARSHAL	9n / 168e	no	12
Mashhad	MASHHAD	36n / 60e	se	3.3
Mauritius	MAURTUS	20s / 57e	no	4
Mazatlan	MAZATLA	23n / 106w	sa	-7
Mbandaka	MBANDK	0 / 18e	no	1
Mecca	MECCA	22n / 40e	no	3
Medellin	MEDELIN	6n / 76w	no	-5
Medford	MEDFORD	42n / 123 w	sa	-8
Medina	MEDINA	24n / 40e	no	3
Melbourne	MELBORN	38s / 145e	sd	10
Memphis	MEMPHIS	35n / 90w	sa	-6
Meridad	MERIDA	21n / 90w	sa	-6
Mexicali	MEXICAL	32n / 115w	sa	-8
Mexico City	MEXICOC	19n / 99w	sa	-6
Miami	MIAMI	26n / 80w	sa	-5
Micronesia	MICRNSA	7n / 153e	no	10
Milano	MILANO	45n / 9e	se	1
Milwaukee	MILWAUK	43n / 88w	sa	-6
Minsk	MINSK	54n / 27e	se	2
Mogadishu	MOGADIS	2n / 45e	no	3
Mombasa	MOMBASA	4s / 40e	no	3
Moncton	MONCTON	46n / 65w	sa	-4
Monrovia	MONROVI	7n / 11w	no	0
Monterrey, MEX	MONTERY	26n / 100w	sa	-6
Montgomery, AL	MONTGRY	32n / 86w	sa	-6
Montpellier	MONTPLR	44n / 4e	se	1
Montreal	MONTRAL	46n / 74w	sa	-5
Montevideo	MONTVID	35s / 56w	no	-3
Port Moresby	MORESBY	9s / 148e	no	10
Moscow	MOSCOW	56n / 37e	se	3

Montes Claros	MTCLARO	17s / 44w	sb	-3
Mulege	MULEGE	27n / 112w	sa	-7
Multan	MULTAN	30n / 72e	no	5
Munich	MUNICH	48e / 12e	se	1
Murmansk	MURMNSK	69n / 33e	se	3
Muscat	MUSCAT	23n / 58e	no	4
Mykonos	MYKONOS	37n / 26e	se	2
N'Djamena	N DJAME	12n / 15e	no	1
Nagpur	NAGPUR	22n / 79e	no	5.3
Nairobi	NAIROBI	1s / 37e	no	3
Nampula	NAMPULA	15s / 39e	no	2
Nanchang	NANCHAN	28n / 116e	no	8
Nanjing	NANJING	32n / 118e	no	8
Nanning	NANNING	23n / 108e	no	8
Nantes	NANTES	47n / 2w	se	1
Napoli	NAPOLI	41n / 14e	se	1
Nashville	NASHVIL	36n / 87w	sa	-6
Nassau	NASSAU	25n / 77w	sa	-5
Natal	NATAL	6s / 35w	no	-3
Newcastle	NEWCAST	55n / 2w	se	0
New Dehli	NEWDEHL	29n / 77e	no	5.3
Newfoundland	NEWFUNL	48n / 55w	sa	3.3
New Orleans	NEWORLN	30n / 90w	sa	-6
New York	NEWYORK	41n / 74w	sa	-5
New Guinea	NGUINEA	5s / 140e	no	10
Niamey	NIAMEY	13n / 2e	no	1
Nice	NICE	44n / 7e	se	1
Nicosia	NICOSIA	35n / 33e	se	2
Nome	NOME	64n / 166w	sa	-9
Norfolk	NORFOLK	37n / 76w	sa	-5
Novosibirsk	NOVSIBR	55n / 83e	se	6
Nurnberg	NURNBRG	49n / 11e	se	1
OBX	OBX	36n / 76w	sa	-5
Odesa	ODESA	47n / 31e	se	2
Odessa	ODESSA	32n / 102w	sa	-6
Okinawa	OKINAWA	27n / 128e	no	9
Oklahoma City	OKLA CT	36n / 98w	sa	-6
Omaha	OMAHA	41n / 96w	sa	-6
Omsk	OMSK	55n / 74e	se	6
Orlando	ORLANDO	28n / 82w	sa	-5
Osaka	OSAKA	35n / 136e	no	9
Oslo	OSLO	60n / 11e	se	1
Ottawa	OTTAWA	45n / 76w	sa	-5
Ouagadougou	OUAGADO	13n / 2w	no	0
Padang	PADANG	1s / 101e	no	7
Palenque	PALENQE	17n / 92w	sa	-6

Palermo	PALERMO	38n / 13e	se	1
Palm Springs	PALMSPR	34n / 116w	sa	-8
Panama	PANAMA	9n / 79w	no	-5
Paramaribo	PARAMAR	6n / 55w	no	-3
Paris	PARIS	49n / 2e	se	1
Pelotas	PELOTAS	32s / 52w	sb	-3
Pensacola	PENSACL	31n / 87w	sa	-6
Perm	PERM	58n / 57e	se	5
Perth	PERTH	32s / 116e	no	8
Philadelphia	PHILADF	40n / 75w	sa	-5
Phoenix	PHOENIX	33n / 112w	no	-7
Phuket	PHUKET	8n / 98e	no	7
Pittsburgh	PITSBRG	40n / 80w	sa	-5
Phnom Pehn	PNOMPEN	12n / 105e	no	7
Poona	POONA	18n / 74e	no	5.3
Portland	PORTLND	46n / 123w	sa	-8
Porto	PORTO	41n / 8w	se	0
Potosi	POTOSI	22n / 101w	sa	-6
Poznan	POZNAN	52n / 17e	se	1
Prague	PRAGUE	50n / 14e	se	1
Prince George	PRNCGEO	54n / 123w	sa	-8
Port Blair	PRTBLAR	12n / 93e	no	5.3
Port Elizabeth	PRTELIZ	33s / 26e	no	2
Port-au-Prince	PRTPRNC	18n / 72w	no	-5
Puerto Montt	PTOMONT	42s / 73w	sc	-4
Punta Arenas	PUNAREN	53s / 71w	sc	-4
Pyongyang	PYONYNG	39n / 126e	no	9
Quebec	QUEBEC	47n / 71w	sa	-5
Quito	QUITO	0 / 78w	no	-5
Raipur	RAIPUR	22n / 82e	no	5.3
Raleigh	RALEIGH	36n / 79w	sa	-5
Rangoon	RANGOON	17n / 96e	no	6.3
Rapid City	RAPID C	44n / 103w	sa	-7
Rawalpindi	RAWLPND	33n / 73e	no	5
Rockhampton	RCKHMPT	23s / 150e	no	10
Regina	REGINA	50n / 105w	no	-6
Rennes	RENNES	48n / 2w	se	1
Reno	RENO	40n / 120w	sa	-8
Reykjavik	REYKJAV	64n / 22w	no	0
Rhodes	RHODES	36n / 28e	se	2
Richmond,VA	RICHMND	38n / 77w	sa	-5
Riga	RIGA	57n / 24e	se	2
Rio Branco	RIOBRNC	10s / 68w	no	-5
Rio De Janeiro	RIODJAN	22s / 43w	sb	-3
Riydah	RIYDAH	25n / 47e	no	3
Roanoke	ROANOKE	37n / 80w	sa	-5

Rochester	ROCHSTR	43n / 77w	sa	-5
Rome	ROME	42n / 13e	se	1
Rosario	ROSARIO	33s / 61w	no	-3
Roseau	ROSEAU	15n / 61w	no	-4
Sacramento	SACRMTO	39n / 122w	sa	-8
Salt Lake City	SALTLC	41n / 112w	sa	-7
Salvador	SALVADR	13s / 39w	no	-3
Samoa	SAMOA	13s / 171w	no	-11
San Antonio	SANANTO	29n / 98w	sa	-6
San Diego	SANDIEG	33n / 117w	sa	-8
San Fransisco	SANFRAN	38n / 122w	sa	-8
San Jose, CA	SANJOSE	37n / 122w	sa	-8
San Jose, Costa Rica	SANJSCR	10n / 84w	no	-6
San Juan	SANJUAN	18n / 66w	no	-4
San Pedro, MEX	SANPEDR	15n / 88w	no	-6
Santa Fe	SANTAFE	36n / 106w	sa	-7
Santana	SANTANA	31s / 56w	sb	-3
Santarem	SANTARM	2s / 55w	no	-4
Santiago	SANTIAG	33s / 71w	sc	-4
Sao Luis	SAOLUIS	3s / 44w	no	-3
Sao Paulo	SAOPAU	23s / 46w	sb	-3
Sapporo	SAPPORO	43n / 141e	no	9
Sarajevo	SARAJEV	44n / 18e	se	1
Saskatoon	SASKATN	52n / 107	no	-6
Savannah	SAVANAH	32n / 81w	sa	-5
Seattle	SEATTLE	47n / 122w	sa	-8
Seoul	SEOUL	38n / 127e	no	9
Seychelles	SEYCHLS	5s / 55e	no	4
Shanghai	SHANGHI	31n / 121e	no	8
Shenyang	SHENYNG	42n / 123e	no	8
Shiraz	SHIRAZ	30n / 53e	sq	3.3
Shreveport	SHRVPRT	32n / 94w	sa	-6
Singapore	SINGPOR	2n / 103e	no	8
Sioux Falls	SIOUX F	43n / 97w	sa	-6
Skopje	SKOPJE	42n / 21e	se	1
Smolensk	SMOLNSK	55n / 32e	se	3
San Salvador	SNSALVD	14n / 89w	no	-6
Santa Barbara	SNTABAR	35n / 120w	sa	-8
Santo Domingo	SNTDOMG	19n / 70w	no	-4
Sofia	SOFIA	43n / 23e	se	2
Spokane	SPOKANE	48n / 117w	sa	-8
Springfield, MI	SPRNGFI	37n / 93w	sa	-6
Sri Lanka	SRILANK	7n / 80e	no	6
St.Paul / Minneapolis	ST PAUL	45n / 93w	sa	-6
Stavanger	STAVNGR	59n / 6e	se	1
Santa Cruz, BOL	STCRUZB	18s / 63w	no	-4

St. Louis	STLOUIS	39n / 90w	sa	-6
Sault Ste.Marie	STMARIE	47n / 84w	sa	-5
St.Marteen	STMARTIN	18n / 63w	no	-4
Stockholm	STOKHLM	59n / 18e	se	1
Strasbourg	STRASBR	48n / 8e	se	1
Stuttgart	STUTGRT	49n / 9e	se	1
Sundsvall	SUNDSVL	63n / 17e	se	1
Surabaya	SURABYA	8s / 112e	no	7
Sydney	SYDNEY	34s / 151e	sd	10
Tabriz	TABRIZ	38n / 47e	sq	3.3
Tabuk	TABUK	28n / 37e	no	3
Tahiti	TAHITI	18s / 150w	no	-10
Taipei	TAIPEI	25n / 122e	no	8
Tallahasse	TALAHAS	31n / 84w	sa	-5
Tampa/St.Petersburg	TAMPASP	28n / 82w	sa	-5
Tampico	TAMPICO	22n / 98w	sa	-6
Tangier	TANGIER	36n / 5w	no	0
Taskent	TASKENT	42n / 69e	no	6
Tbilisi	TBILISI	42n / 45e	se	3
Tehran	TEHRAN	36n / 52e	sq	3.3
Teresina	TERESIN	5s / 43w	no	-3
Thessaloniki	TESLNKI	41n / 23e	se	2
Thunder Bay	THUNDRB	48n / 89w	sa	-5
Tokyo	TOKYO	36n / 140e	no	9
Toledo	TOLEDO	42n / 84w	sa	-5
Tonga	TONGA	31s / 175w	no	13
Toronto	TORONTO	44n / 79w	sa	-5
Toulouse	TOULOUS	44n / 1e	se	1
Tours	TOURS	47n / 0	se	1
TravisAFB	TRAVIS	38n / 122w	sa	-8
Trinidad	TRINIDA	11n / 62w	no	-4
Tripoli	TRIPOLI	32n / 13e	no	1
Tromso	TROMSO	69n / 19e	se	1
Trondheim	TRONDHM	63n / 10e	se	1
Trujillo	TRUJILO	8s / 79w	no	-5
Tsingtao	TSNGTAO	36n / 120e	no	8
Tucson	TUCSON	32n / 111w	no	-7
Tucuman	TUCUMAN	27s / 65w	no	-3
Tulsa	TULSA	36n / 96w	sa	-6
Tunis	TUNIS	37n / 10e	no	1
Turku	TURKU	61n / 23e	se	2
Tuscaloosa	TUSCLOS	33n / 88w	sa	-6
Uberlandia	UBERLAN	18s / 48w	sb	-3
Ujungpadang	UJUNGPD	5s / 120e	no	8
Ulaanbaatar	ULANBTR	48n / 107e	NEW	8
Valletta,Malta	VALLETA	36n / 14e	EU	1

Vancouver	VANCUVR	49n / 123w	sa	-8
Venezia	VENEZIA	46n / 12e	se	1
Veracruz	VERACRZ	19n / 96w	sa	-6
Victoria,Seychelles	VICTORI	4s / 55e	NO	4
Vienna	VIENNA	48n / 16e	se	1
Vientiane,Laos	VIENTIA	18n / 102e	NO	7
Vila, VANUATU	VILA	18s / 168e	no	11
Vilnius	VILNIUS	55n / 25e	no	2
Vishakhapatnam	VISHAPT	18n / 83e	no	5.3
Vitoria	VITORIA	20s / 41w	sb	-3
Vladivostok	VLADVST	43n / 132e	no	10
Volgograd	VOLGRAD	48n / 44e	se	3
Warsaw	WARSAW	52n / 21e	se	1
Washington DC	WASHNGT	39n / 77w	sa	-5
Wellington	WELINGT	41s / 175e	sz	12
Wenzhou	WENZHOU	28n / 121e	no	8
Wichita	WICHITA	38n / 97w	sa	-6
Wichita Falls	WICHTFL	34n / 98w	sa	-6
Williston	WILISTN	48n / 104w	sa	-6
Wilmington	WILMNGT	34n / 78w	sa	-5
Willemstad	WILMSTD	12n / 69w	no	-4
Windhoek	WINDHOK	23s / 17e	sn	2
Winnipeg	WINIPEG	50n / 97w	sa	-6
Winston-Salem	WNSTSAL	36n / 80w	sa	-5
West Palm Beach	WPLMBCH	27n / 80w	sa	-5
Wuhan	WUHAN	31n / 114e	no	8
Xiamen	XIAMEN	24n / 118e	no	8
Xian	XIAN	34n / 108e	no	8
Yanbu	YANBU	24n / 38e	no	3
Yaounde	YAOUNDE	4n / 12e	no	1
Yellowstone	YELOSTO	44n / 110w	sa	-7
Youngstown	YNGSTWN	41n / 81w	sa	-5
Yosemite	YOSEMIT	38n / 120w	sa	-8
Zagreb	ZAGREB	46n / 16e	se	1
Zahedan	ZAHEDAN	29n / 61e	sq	3.3
Zaragoza	ZARAGOZ	42n / 1w	se	1
Zhengszou	ZHENGZU	35n / 114e	no	8
ZULU	ZULU	0 / 0	no	0
Zurich	ZURICH	47n / 9e	se	1

Time Zone Map

The world is divided into 24 time zones. Time zone 0 goes through Greenwich, London, also called GMT or UTC and goes from:

+1 to +12 EAST

-1 to -12 WEST

in 30 minute increments.

They meet at the date line which cuts through the Pacific Ocean.

Each time zone corresponds to 15 degrees, yet over land is governed by geographical boundaries.

When setting your HOME or AWAY location by LAT/LON please use the map to choose your time zone.



Water Resistance.

The watches are built to 10 ATM = 333 feet = 100 meter technical specifications with double O-rings on pushers and crown. We do not recommend diving with them.

LIMITED WARRANTY

Wild Seed Inc. warrants all components of this product, except batteries and societal time changes beyond our control, to be free of defect in material and workmanship under normal use for a period of two years from date of purchase.

Wild Seed Inc. will, at its discretion, repair or replace the product at no charge for parts and labor.

The warranty does not apply to failures caused by misuse, fire, tampering or any consequential claims resulting from use and /or application. Send warranted product with proof of date of purchase and postage paid to our address listed on our web site.

Please include your name and address for return shipment.

www.yeswatch.com

Your Watch Information

Please retain a record of the following information:

- watch model
- serial number

-
-

date purchased
purchase location